nook

Copley Modular Upholstered Wall Panels
– Installation guide

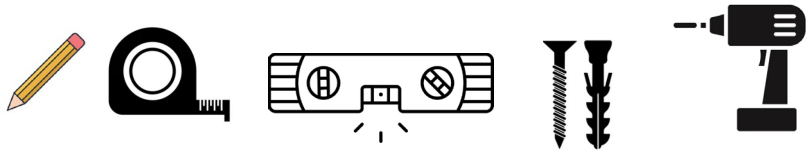

Tools You'll Need:

- Tape measure
- Spirit level
- Drill/ Screwdriver
- Correct drill bits for your masonry
- Appropriate wall fixings/ Screws & Wall plugs (per panel)
- Pencil

⚠️ Fixings Not Included:

Screws and wall plugs are not supplied, as requirements will vary based on your wall type. Please consult your local DIY store or tradesperson for the correct fixings.

Our headboard wall panels are designed for **simple DIY installation**, either by you or a trusted tradesperson. Each panel includes an **MDF split baton system**, allowing the panels to be securely hooked onto the wall after the baton is fixed in place.

This is a **standard headboard fitting method**, and most joiners or tradespeople will be familiar with the process.

Copley Modular Upholstered Wall Panels
– Installation guide

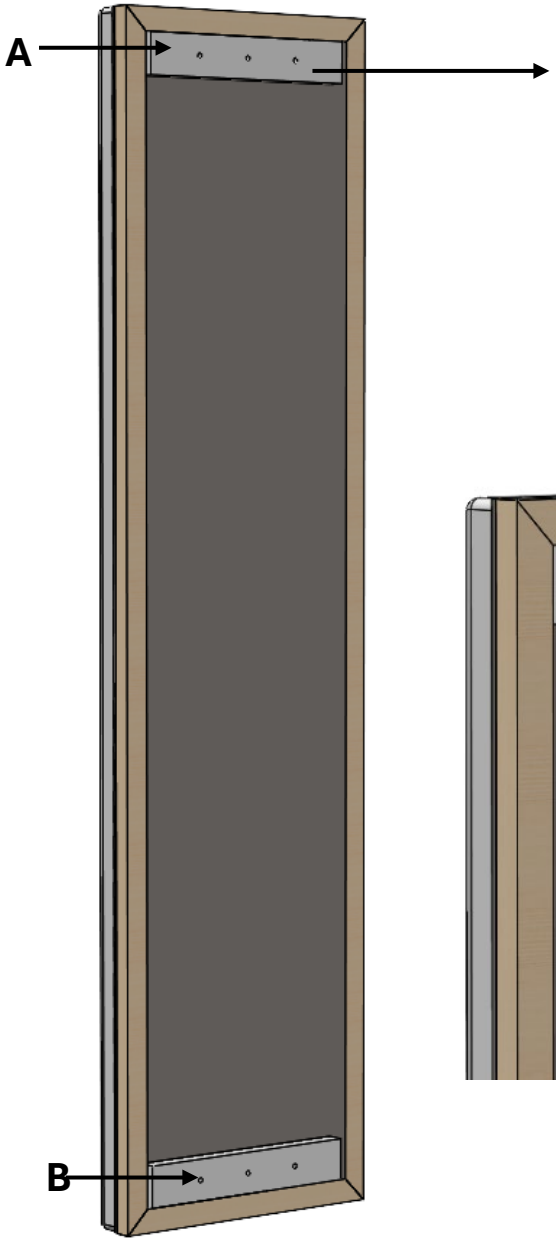

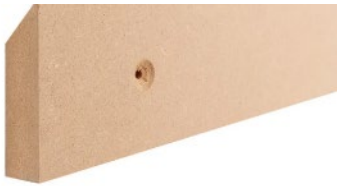

Each panel is supplied with split baton fixing rails for top and bottom of the wall panel.

The holes on the split baton are pre-drilled.

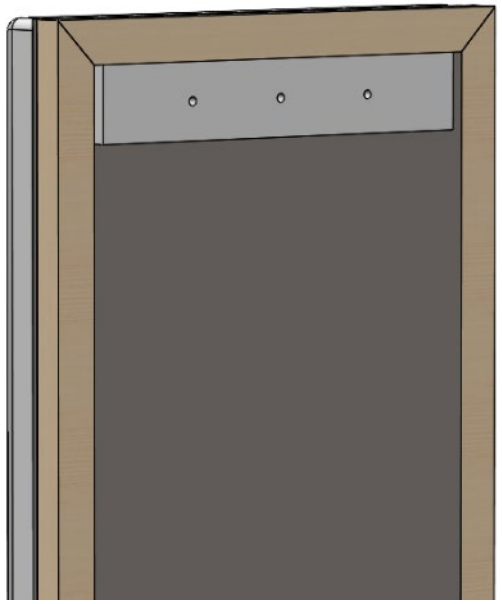

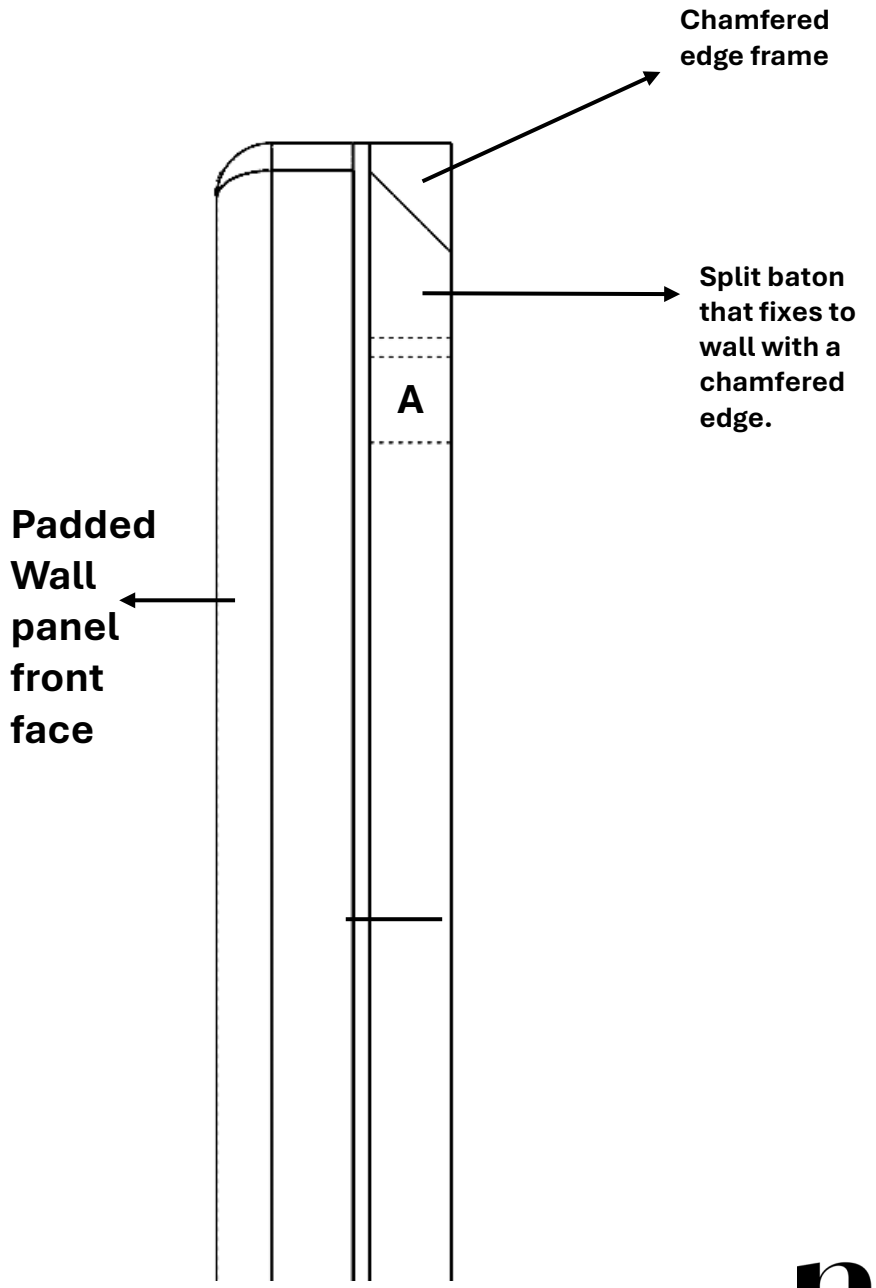

nook

Copley Modular Upholstered Wall Panels
– Installation guide

nook

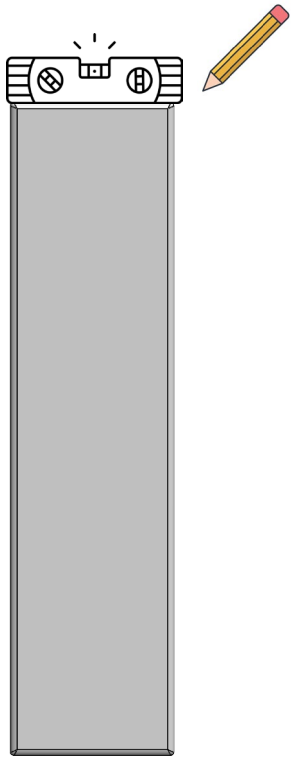

STEP.1 – LIFT THE PANEL AGAINST WALL IN DESIRED POSITION. USE A SPIRIT LEVEL TO CHECK IT'S STRAIGHT. MAKE A PENCIL MARK ON THE WALL.

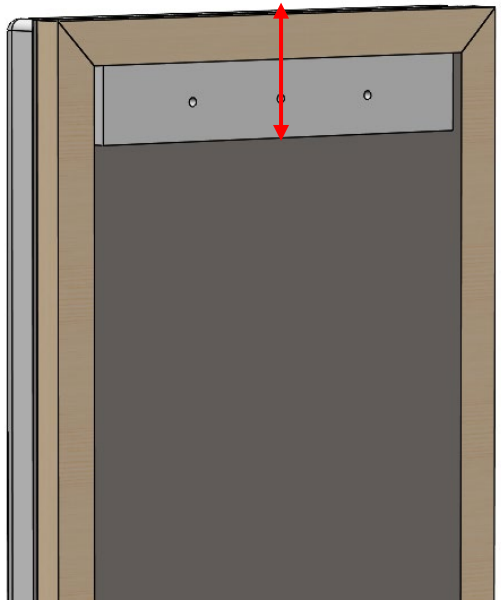

STEP.2 – FIND THE MID POINT OF THE PANEL - MEASURE FROM TOP OF PANEL TO THE BOTTOM OF THE SPLIT BATON.

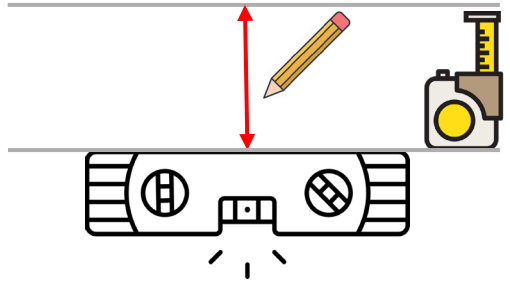

STEP.3 – NOW USE THIS MEASUREMENT TO MAKE A STRAIGHT LINE TO MARK ON THE WALL THE BOTTOM OF THE SPLIT BATON.

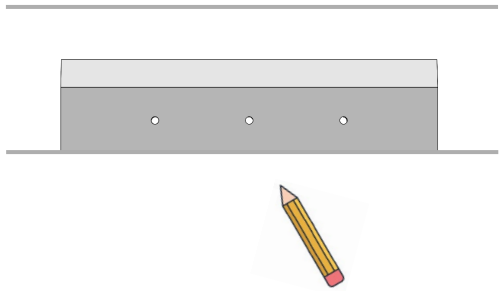

STEP.4 – LINE THE BOTTOM OF THE SPLIT BATON ON THE LOWER LINE AND MARK UP THE PILOT HOLES.

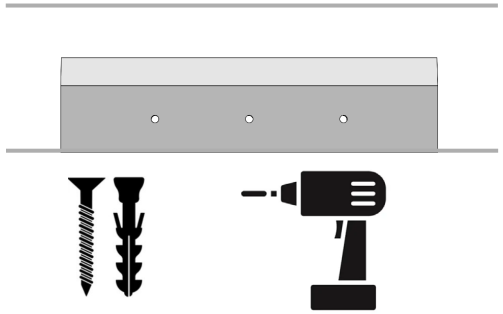

STEP.5 – PILOT HOLE/ DRILL THE SPLIT BATON HOLES. USE THE CORRECT DRILL BIT FOR YOUR WALL TYPE. DRILL DEEP ENOUGH TO INSERT WALL PLUGS.

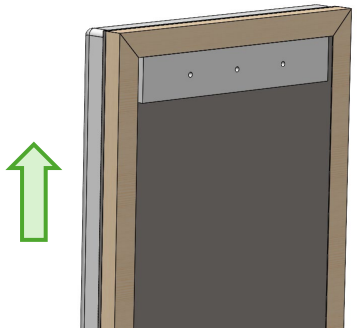

STEP.6 – LIFT AND HOOK YOUR WALL PANEL ONTO THE FIXED SPLIT BATON.

Copley Modular Upholstered Wall Panels

– Demo horizontal positioning

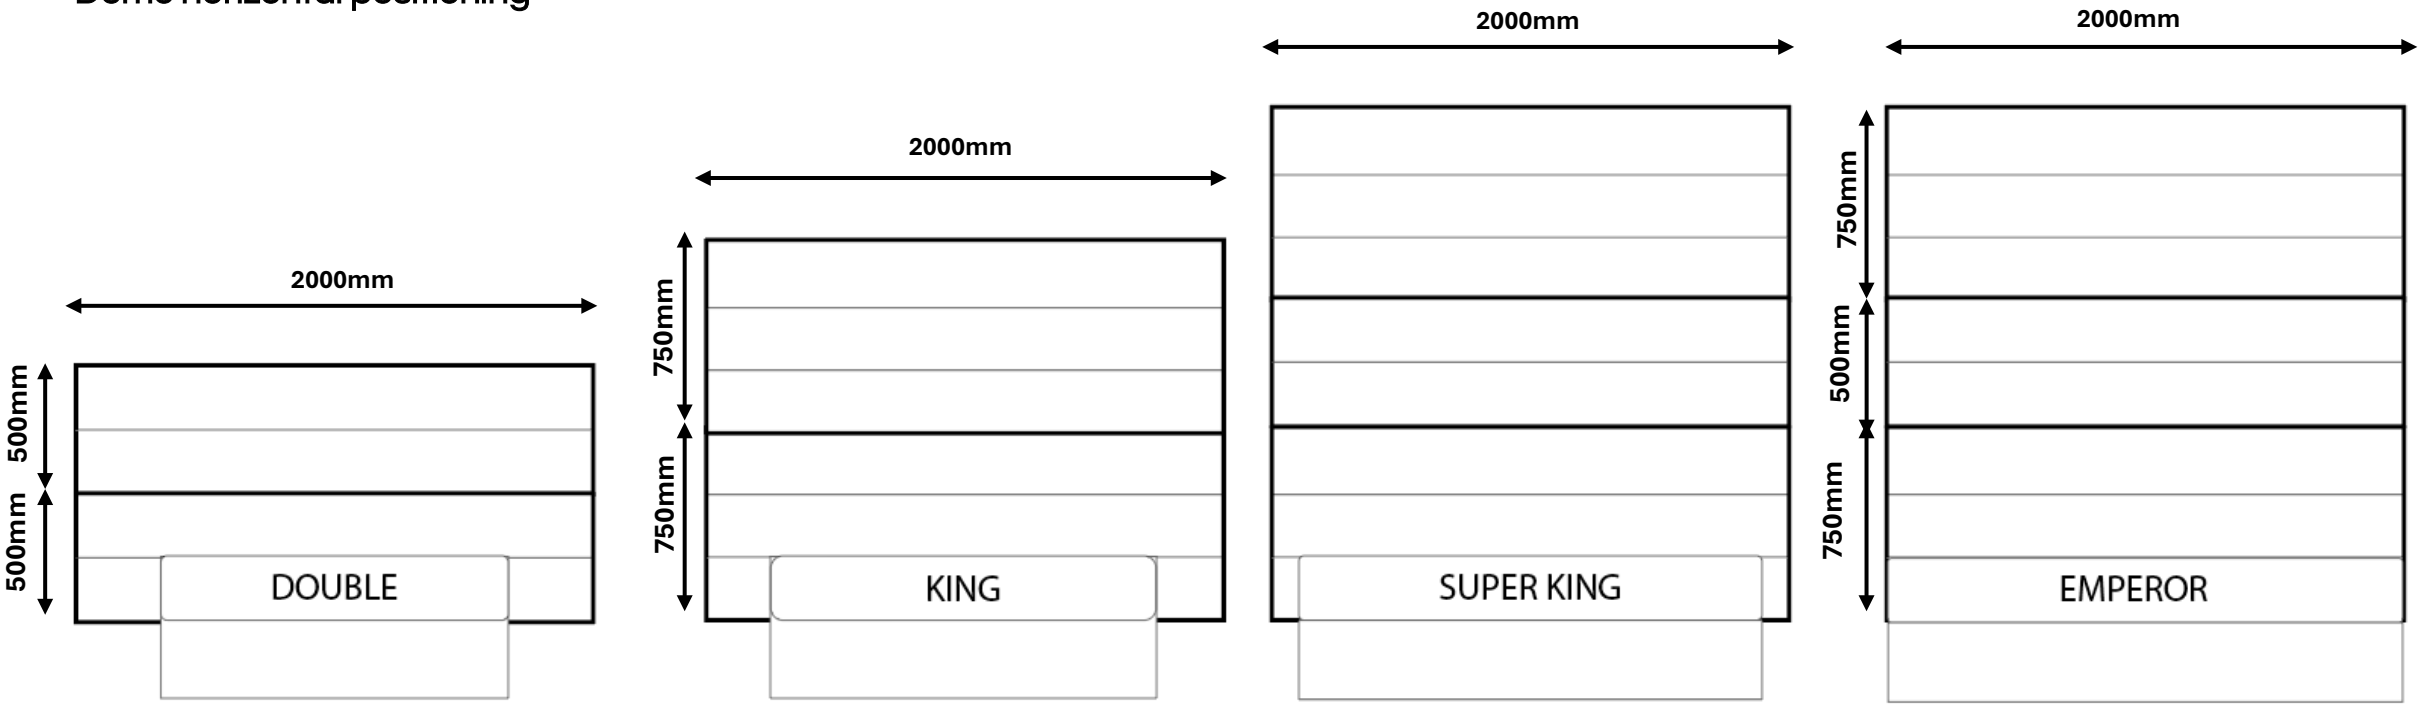

To demo that the same fluted panels can be flipped and installed horizontally.
* Just fit the split batons horizontally for wall assembly as shown.

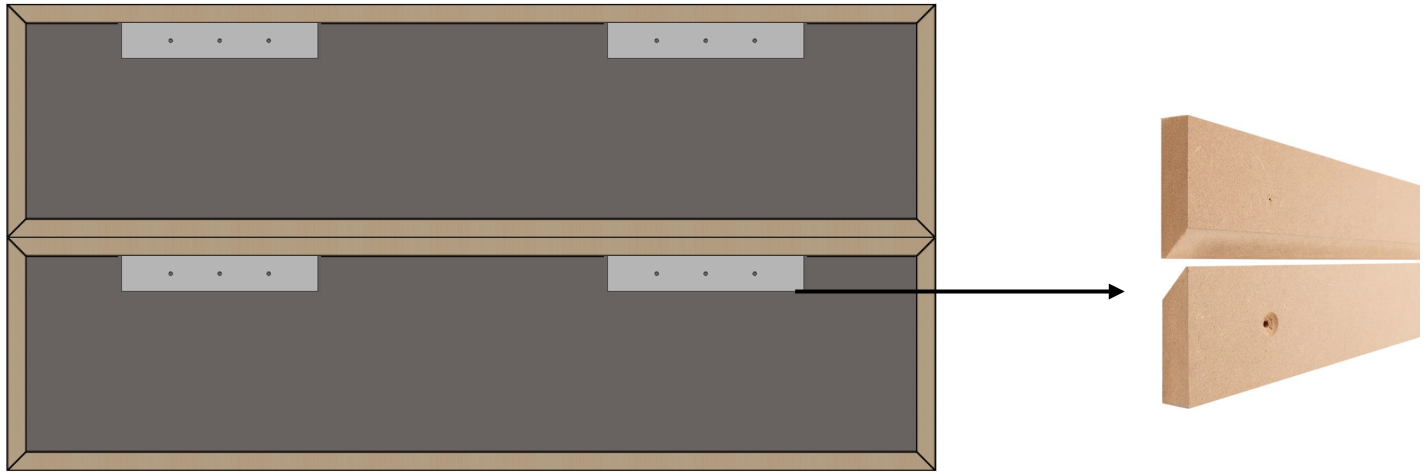

nook